


# SB PRO Quick Reference Sheet

for the




## STEP #1

**PULL OUT SLEEVE BOARD AND REST IT ON THE SLEEVE SUPPORT ARM**

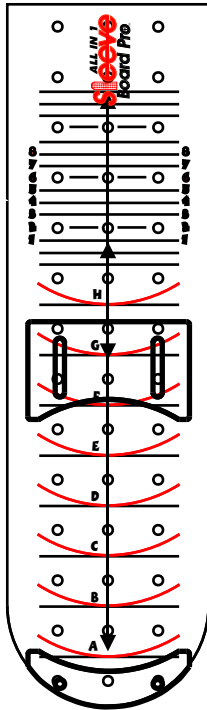

**SUPPORT ARM**


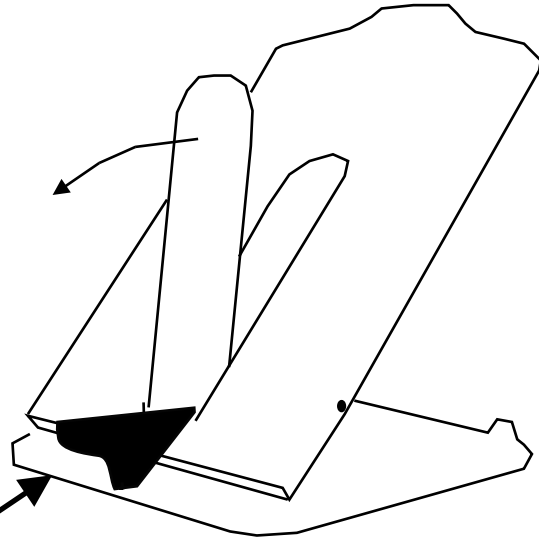


## STEP #1

**PLACE THE LEVELER ARM OVER THE SCREW STUDS STICKING UP ON THE BACK OF THE SLEEVE BOARD**

**PLACE THE FLAT WASHER AND LOCK WASHER ON THE SCREWS AND THEN PLACE THE THUMB SCREW KNOBS ON AND TIGHTEN LOOSLY**

**SCREW STUDS**

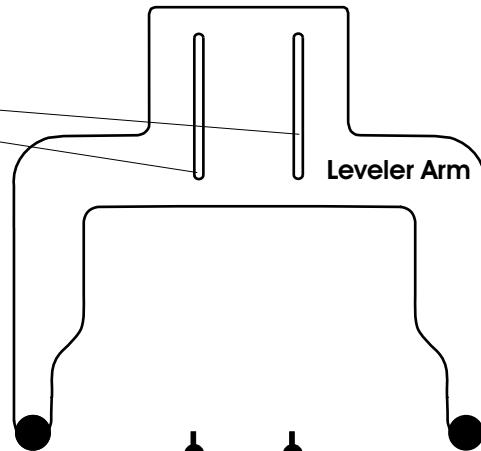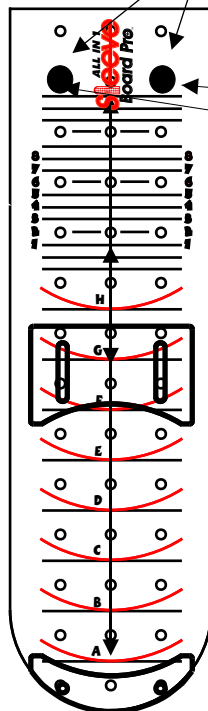

**THUMB SCREW KNOBS**

**LOCK WASHERS**


**FLAT WASHERS**

# SB PRO Quick Reference Sheet

## STEP #1

**PUSH BACK  
LEVELER ARM  
AGAINST  
THE ALL IN 1**

**PLACE THE HOOP  
RING & TOP HOOP  
BETWEEN THE  
TWO BRACKETS**

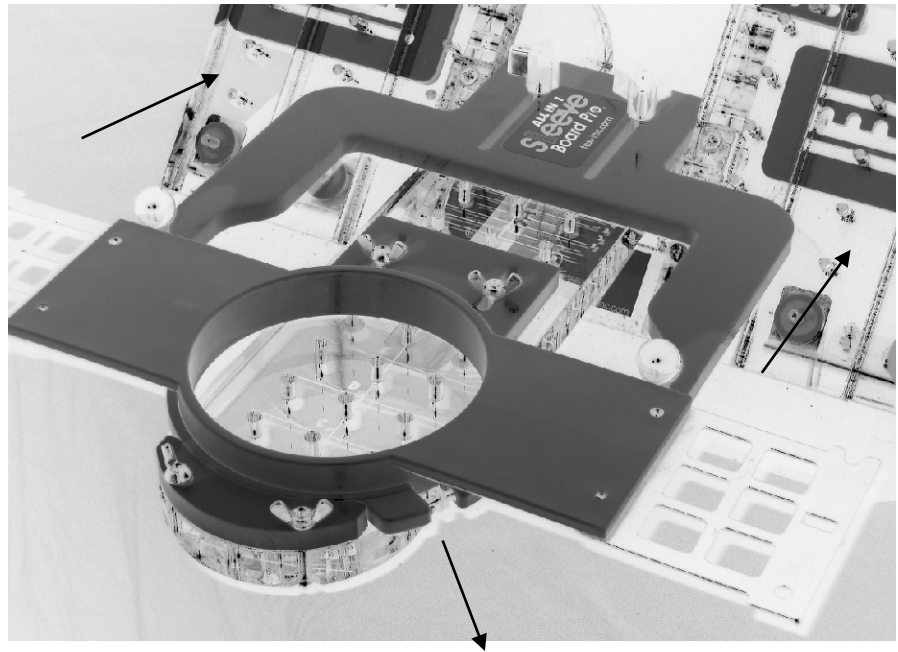


## STEP #1

**PULL THE LEVELER  
ARM UP AGAINST  
THE HOOP ARMS**

**REST THE HOOP  
ARMS ON THE  
WHITE NYLON  
SPACER UNDER THE  
BLACK BALL**

**USE THE RULER LINES  
SO THAT EA SIDE  
OF THE LEVELER ARM  
IS EQUAL - THEN  
TIGHTEN BOTH  
THUMB SCREWS**

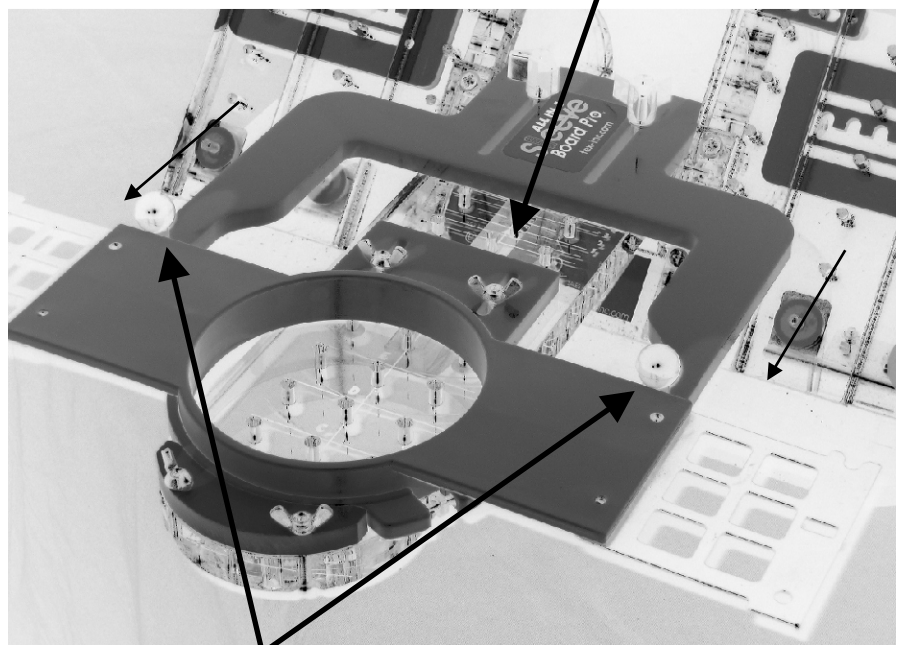

**RULER LINES**

**NYLON SPACER**