
Instructions For Creating Coasters Using SHARED-Hearts-Ornaments Designs

By Nancy Smith






The Color Sequence Chart shown below will be referred to throughout these instructions.

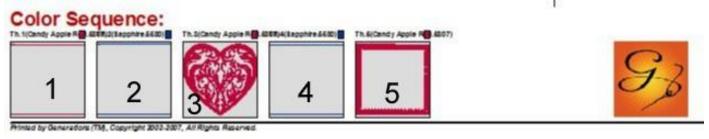


Required Materials for 1 coaster:

- Heat-n-Bond Lite (5 x 5 inches)
- Fabric for face of Coaster (5 x 5 inches)
- Felt (5 x 5 inches)
- Water soluble stabilizer enough for one hooping in **5 x 7 hoop**
- Thread
- Temporary Spray Adhesive

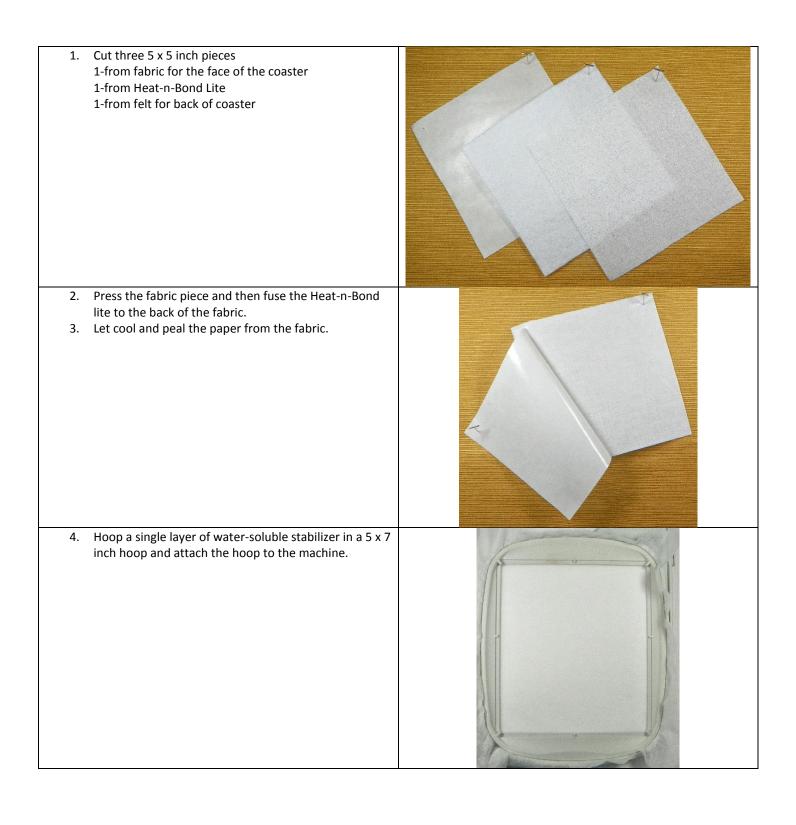

5. Sew the first set of stitches shown in the Color Sequence Chart. (#1) This creates the placement stitches.

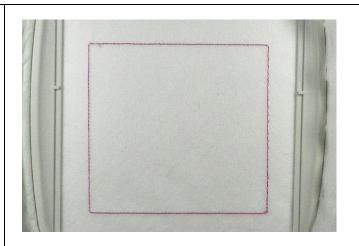

6. Place the Heat-n-Bond backed fabric over the placement stitches and stitch # 2 in the Color Sequence Chart. This will "tack down" the fabric to the stabilizer.



7. Sew # 3 in the Color Sequence Chart. This will create the heart detail and the border around the heart.



Remove the hoop from the machine, turn upside down, and use Temporary Adhesive spray, attach the felt to the back of the hoop-making sure to cover the entire design. Turn hoop over and hand press the front of the hoop to firmly attach the felt to the back of the hoop. 9. Return the hoop to the machine and sew # 4 in the Color Sequence Chart. This will tack the felt to the design. 10. Remove the hoop from the machine and carefully cut away excess fabric on front and felt on back of the design. 11. Return hoop to machine and sew #5 shown in the Color Sequence Chart. This will add the satin border to the coaster. Make sure your bobbin thread is the same as the needle thread for this set of stitches.


12. Remove the hoop from the machine and the coaster from the hoop. Cut away the stabilizer, leaving a small amount around the outside so you will not cut the satin border.



13. Use a wet paper towel or cloth to remove the remaining stabilizer. Let Coaster air dry. You may want to "gently" press the back of the coaster. Do so on a terry towel and a pressing cloth to make sure the coaster is not marred.

The coaster is finished.



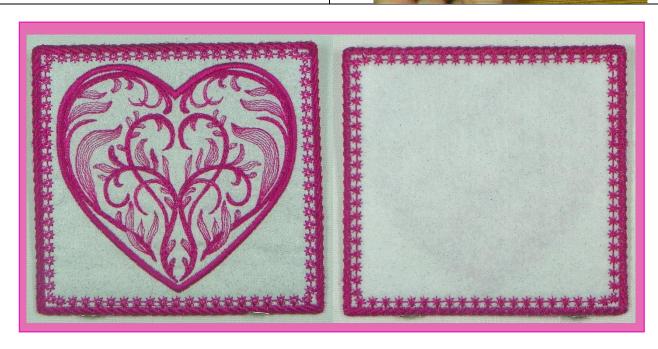

Instructions for Creating the Shared Hearts Ornament Pouches


(4 x 4 inch hoop)

By Nancy Smith






The Color Sequence Chart below will be referred to throughout these instructions.

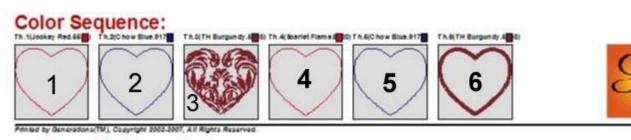

Required Materials for 1 Heart Pouch:

- 1 Fat Quarter fabric for face and pocket of Heart (will make several)
- Felt (12 x 12 inch square will be enough to use on four of the pouches)
- Heat-n-Bond Lite(enough for two pieces 5 x 5 inches and 5 x 6 inches)
- Temporary Spray Adhesive
- Thread
- 1. Cut two pieces of fabric
 - a. 5 x 5 inches
 - b. 5 x 6 inches
- 2. Cut two pieces of Heat-n-Bond
 - a. 3 x 5 inches
 - b. 5 x 5 inches
- 3. Cut 1 piece of felt- 5 x 5 inches

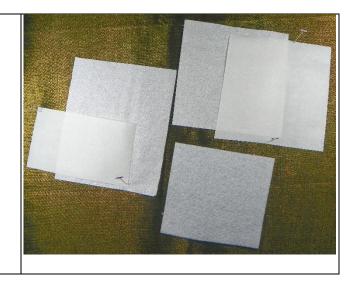


Fuse the 5 x 5 inch Heat-n-Bond to the back of the 5 x 5 inch fabric.
 Press the 3 x 6 inch piece of fabric in half, and fuse the 3 x 5 inch Heat-n-Bond to the wrong side of the folded fabric. This creates a folded, fused piece of fabric 3 x 5 inches and will be used to create the pocket on the back of the heart.
 Remove the paper backing from the pieces.



7. Hoop water-soluble stabilizer in a 4 x 4 inch hoop and attach to machine.



8. Sew the first set of stitches (#1 in the Color Sequence Chart)

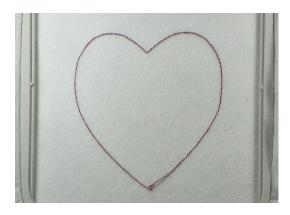

9. Place the 5 x 5 inch piece of fabric (with the Heat-n-Bond fused to the back) over placement stitches created by sewing the first set of stitches.	
10. Sew the second set of stitches (#2 in the Color Sequence Chart).	
11. Sew the next set of stitches (#3 in the Color Sequence Chart). These stitches will create the inside design of the heart.	
12. Remove the hoop from the machine, turn the hoop upside down, and place the 5 x 5 inch piece of felt on the back of the design (right side up). Use Temporary Adhesive Spray to hold it in place.	

13. Return the hoop to the machine and sew the next set of stitches (#4 in the Color Sequence Chart). This set of stitches will tack the felt piece in place.	
14. Remove the hoop from the machine, turn over and trim away the excess felt from around the design.	
15. Place the 3 x 5 inch piece of folded and fused fabric over the design on the back side of the hoop-about ¼ inch down from the center of the heart. Use Temporary Adhesive spray to hold the fabric in place.	
16. Return hoop to machine, change bobbin thread to the same color to be used for the border, and sew the next set of stitches (#5 in the Color Sequence Chart). These stitches will tack the fabric to the design and form the "pocket" on the back of the heart.	

17. Remove hoop from machine and carefully cut away the fabric from the front and back of the design.	
18. Return the hoop to the machine and sew the final set of stitches (#6 in the Color Sequence Chart). These stitches will create the satin border around the design.	
19. Remove the hoop from the machine and remove the design from the hoop. Carefully cut away excess stabilizer from the design, leave about ¼ inch of stabilizer around the design.	
20. Use a wet paper towel or cloth to remove the remaining ¼ inch of stabilizer.	

- 21. Place the design **face down** on a clean, dry towel, cover with a pressing cloth, and press the design.
- 22. Your design is complete and ready to be stuffed with gift card, candy, a note, etc.



