



ITH Gnome House clock instructions

Materials:

Batting

Fabric

Felt

Hot Glue

Clock mechanism

LET'S START!


STEP 1: Stitch the placement line for the batting




STEP 2: Place the batting on the top of the hoop



STEP 3: Stitch the batting down. Trim the excess

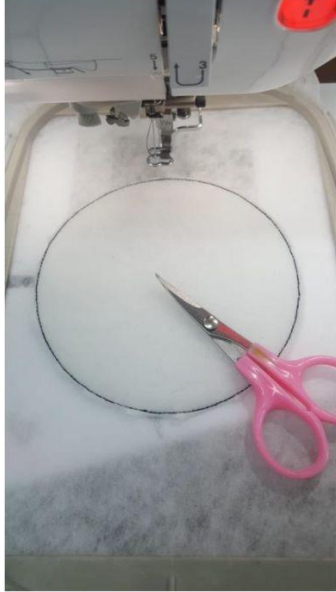

STEP4: Place the felt on the top of the hoop. Stitch the felt down

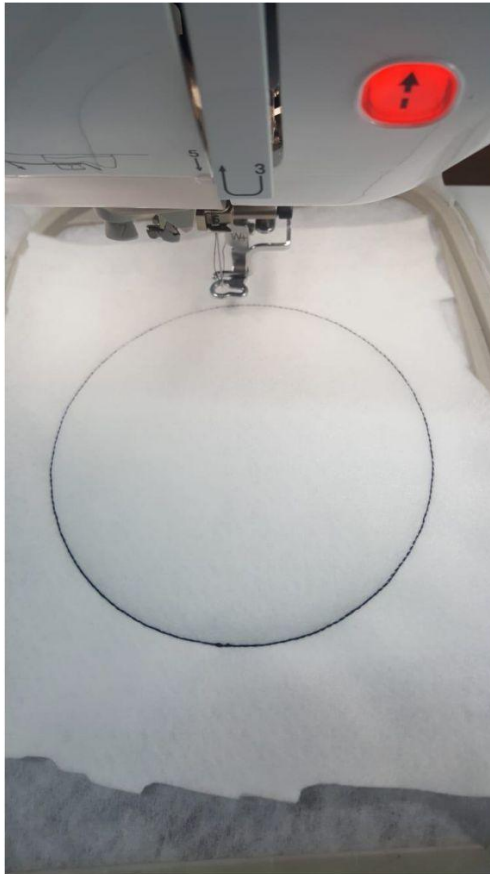

STEP 5: Follow the machine steps, stitch the applique, fill stitch and satin stitch parts and stop before the last step!



STEP 6: Remove the hoop from the machine and attach with tape a felt piece to the back



STEP 7: Stitch the felt down, remove it and cut the excess.

STEP9: Stitch the other parts, attach de pieces with hot glue and install de clock mechanism

